

A reverse acting, two—pipe thermostat is required. Damper is normally open. Optional reheat control will require a normally closed hot water valve or a normally open P.E. switch. As the space temperature decreases, the primary air damper modulates from maximum CFM setpoint to shut—off. When the primary air has decreased to a field adjustable CFM, the unit fan is energized thus supplying cold air mixed with ceiling plenum air to the space. If the space temperature continues to drop when the unit is supplying plenum air only, an optional electric heater or hot water coil valve is energized to satisfy load.

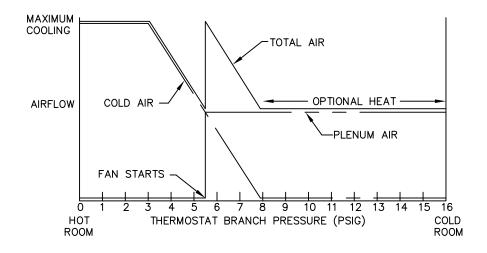

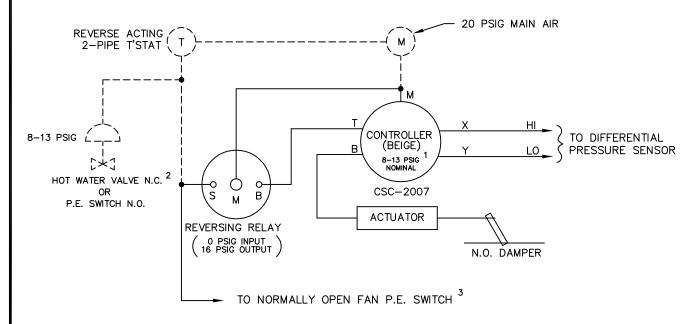

- CONTROLLER REQUIRES FIELD CALIBRATION
  AND SETUP UNLESS OTHERWISE SPECIFIED.
  IF FACTORY CALIBRATION OPTION IS USED, THE
  RESET SPAN AND STARTPOINT WILL BE ADJUSTED
  AS SHOWN ABOVE UNLESS OTHERWISE SPECIFIED.
- <sup>2</sup> HOT WATER VALVE SUPPLIED BY OTHERS P.E. SWITCH IS INCLUDED IN ELECTRIC HEATER

----FACTORY PIPING ----FIELD PIPING

3 REFER TO MOTOR WIRING DIAGRAM OR ELECTRICAL HEAT DIAGRAM (IF APPLICABLE).

PNEUMATIC AIR CONSUMPTION 1.1 SCFH



TITLE:	PRESSURE INDEPENDENT PNEUMATIC CONTROLS	DRN BY: LARRY	DATE: 08/3		drawing no.
	THIS DRAWING CONTAINS PROPRIETARY DATA. UNAUTHORIZED DISCLOSURE, REPRODUCTION, OR USE IS STRICTLY PROHIBITED WITHOUT WRITTEN PERMISSION		DATE: 08/19/08	<b>REV:</b> 07	10480