

This sequence provides constant volume discharge control. A reverse acting, two—pipe thermostat is required. Both dampers are normally closed. When the space temperature is warm, the cold damper is controlling at the maximum CFM setting and the hot damper is closed. As space temperature drops, the cold damper modulates closed as the hot damper opens. If the space temperature continues to drop, the cold damper shuts off and the hot damper controls at the maximum CFM setting.

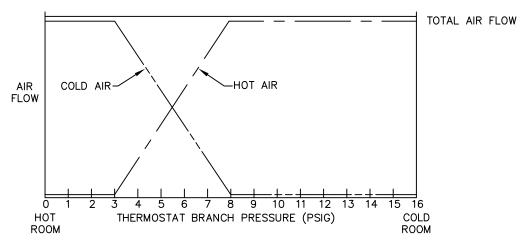

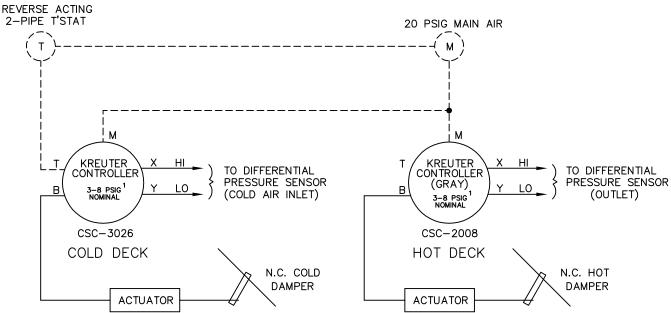

CONTROLLER REQUIRES FIELD CALIBRATION
AND SET UP UNLESS OTHERWISE SPECIFIED.
IF FACTORY CALIBRATION OPTION IS USED, THE
RESET SPAN AND START POINT WILL BE ADJUSTED
AS SHOWN ABOVE UNLESS OTHERWISE SPECIFIED.
FACTORY SET AIRFLOW LIMITS ARE NOMINAL.

- FACTORY PIPING ---- FIELD PIPING

PNEUMATIC AIR CONSUMPTION 1.6 SCFH



| TITLE: | DT403RC   | DRN BY: |       | DATE:    |      | DRAWING NO. |
|--------|---|---------|-------|----------|------|-------------|
|        |   | WDD     |       | 05/21/03 |      |             |
|        | PRESSURE INDEPENDENT PNEUMATIC CONTROLS   |         |       | _ ′ ′    |      | 00045       |
|        | THE RESUME CONTINUE PROPRIETIES AND LINEARIZED PROPRIETIES  | CKD BY: | DATE: | :        | REV: | 22815       |
|        | THIS DRAWING CONTAINS PROPRIETARY DATA. UNAUTHORIZED DISCLOSURE, REPRODUCTION, OR USE IS STRICTLY PROHIBITED WITHOUT WRITTEN PERMISSION | WAE     | 10/   | 07/08    | 02   |             |

<sup>&</sup>lt;sup>2</sup> ADJUST HOT DECK CONTROLLER FOR CONSTANT VOLUME OPERATION AT MAXIMUM AIRFLOW SETPOINT.