

A reverse acting, two-pipe thermostat is required. Damper is normally open. Optional reheat control will require a normally closed hot water valve or a normally open P.E. switch. All air to room flows through the fan. The thermostat modulates the cold air damper. Unit fan draws air either from the cold duct or the ceiling plenum to maintain a desired room temperature. If warm plenum air fails to satisfy load, an optional electric heater or hot water coil valve is energized. An air pressure switch deenergizes the unit fan when the central system is shut down. The thermostat will override this switch and start the unit fan on a call for heating.

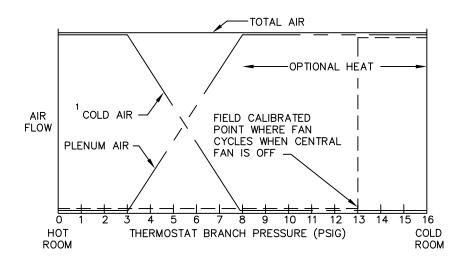

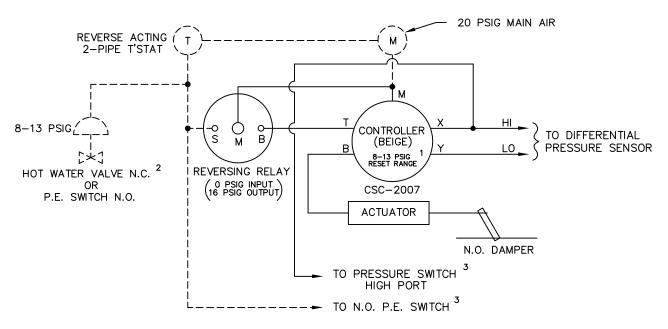

¹ CONTROLLER REQUIRES FIELD CALIBRATION AND SET UP UNLESS OTHERWISE SPECIFIED. CONTROLLER RESET RANGE WILL VARY WITH AIR FLOW LIMITS.

——FACTORY PIPING ----FIELD PIPING —-—FACTORY WIRING

³ REFER TO MOTOR WIRING DIAGRAM OR ELECTRIC HEAT DIAGRAM (IF APPLICABLE).

PNEUMATIC AIR CONSUMPTION 1.1 SCFH



TITLE:	FC408R	DRN BY:		DATE:		DRAWING NO.
	FG406K	NANCE	- 1	05/09/94		
	PRESSURE INDEPENDENT PNEUMATIC CONTROLS	MANOE		30,00,0.		40054
		CKD BY:	DATE:		REV:	16254
	THIS DRAWING CONTAINS PROPRIETARY DATA. UNAUTHORIZED DISCLOSURE, REPRODUCTION, OR USE IS STRICTLY PROHIBITED WITHOUT WRITTEN PERMISSION	WAE	11/	19/08	06	

HOT WATER VALVE SUPPLIED BY OTHERS. P.E. SWITCH IS INCLUDED IN ELECTRIC HEATER (IF APPLICABLE).