



This sequence provides constant volume discharge control. A reverse acting, two-pipe thermostat is required. The cold air damper is normally closed and the hot air damper is normally open. When the space temperature is warm, the cold damper is controlling at the maximum CFM setting and the hot damper is closed. As the space temperature drops, the cold damper modulates closed as the hot damper opens. If the space temperature continues to drop, the cold damper shuts off and the hot damper controls at the maximum CFM setting.

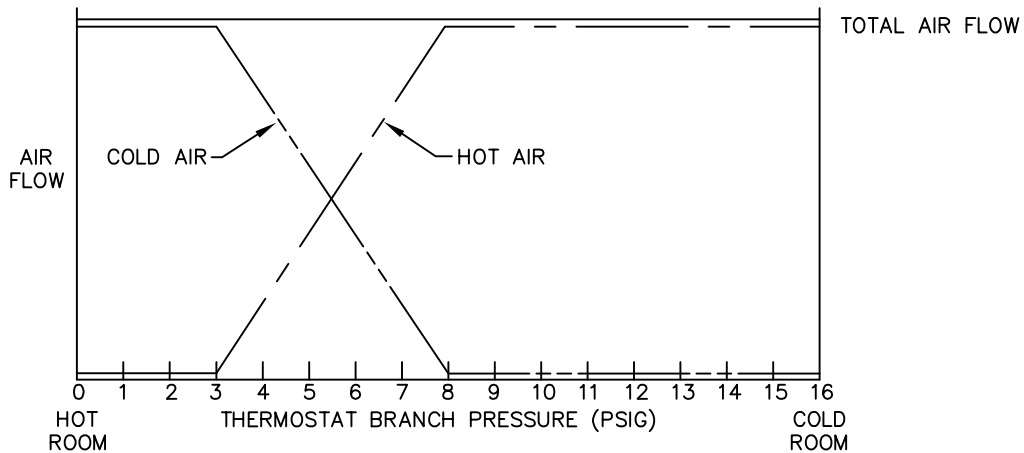

REVERSE ACTING  
2-PIPE T'STAT

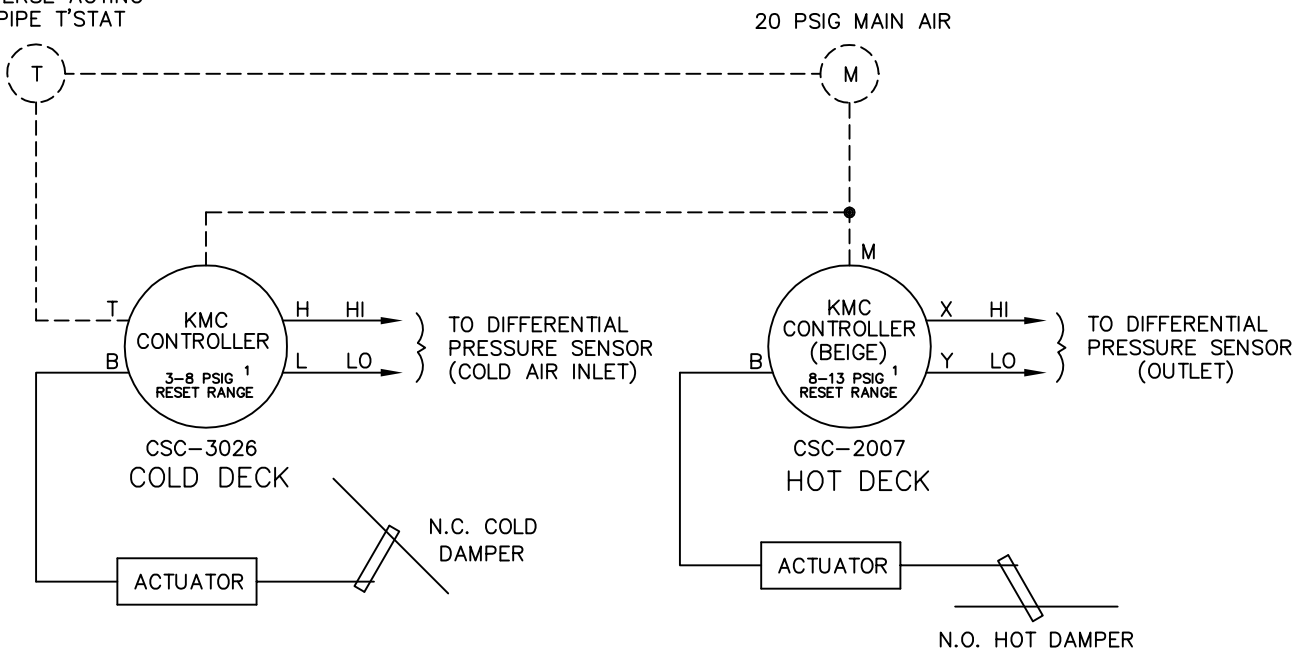

<sup>1</sup> CONTROLLER REQUIRES FIELD CALIBRATION AND SET UP UNLESS OTHERWISE SPECIFIED. IF FACTORY CALIBRATION OPTION IS USED, THE RESET SPAN AND START POINT WILL BE ADJUSTED AS SHOWN ABOVE UNLESS OTHERWISE SPECIFIED. FACTORY SET AIRFLOW LIMITS ARE NOMINAL.

<sup>2</sup> ADJUST HOT DECK CONTROLLER FOR CONSTANT VOLUME OPERATION AT MAXIMUM AIRFLOW SETPOINT.

<sup>3</sup> THE CONTROLLER, WHICH IS CONNECTED TO THE DOWNSTREAM SENSOR, WILL REQUIRE FIELD ADJUSTMENT TO ASSURE PROPER AIR BALANCE AND OPERATION.

PNEUMATIC AIR CONSUMPTION 2.0 SCFH  
 ——— FACTORY PIPING    - - - - FIELD PIPING

	<b>TITLE:</b> <b>DT407RC</b> PRESSURE INDEPENDENT PNEUMATIC CONTROLS	<b>DRN BY:</b> WDD	<b>DATE:</b> 01/22/01	<b>DRAWING NO.</b>  21764
	THIS DRAWING CONTAINS PROPRIETARY DATA. UNAUTHORIZED DISCLOSURE, REPRODUCTION, OR USE IS STRICTLY PROHIBITED WITHOUT WRITTEN PERMISSION	<b>CKD BY:</b> WAE	<b>DATE:</b> 08/19/08	